

CE2SL

installation notes

Ceiling Dual Slave Relay

The ceiling dual slave relay comprises a socket, box, relay and terminal block.

Read the installation notes for the plug-in control to be used.

Turn off the mains and if in doubt, please consult a qualified electrician.


The box must be sited to suit the plug-in control.

A 230Vac supply must be provided to terminals L1 and N.

Any of the DANLERS ceiling controls may be plugged in to the socket which then provides the following benefits:-

- A. The plug-in control may still control a circuit by connecting a load to SLI.
- B. As slave contacts are isolated any AC or DC voltage supply up to 230V may be connected to C3 and/or C2.

The wiring diagram is as follows:-

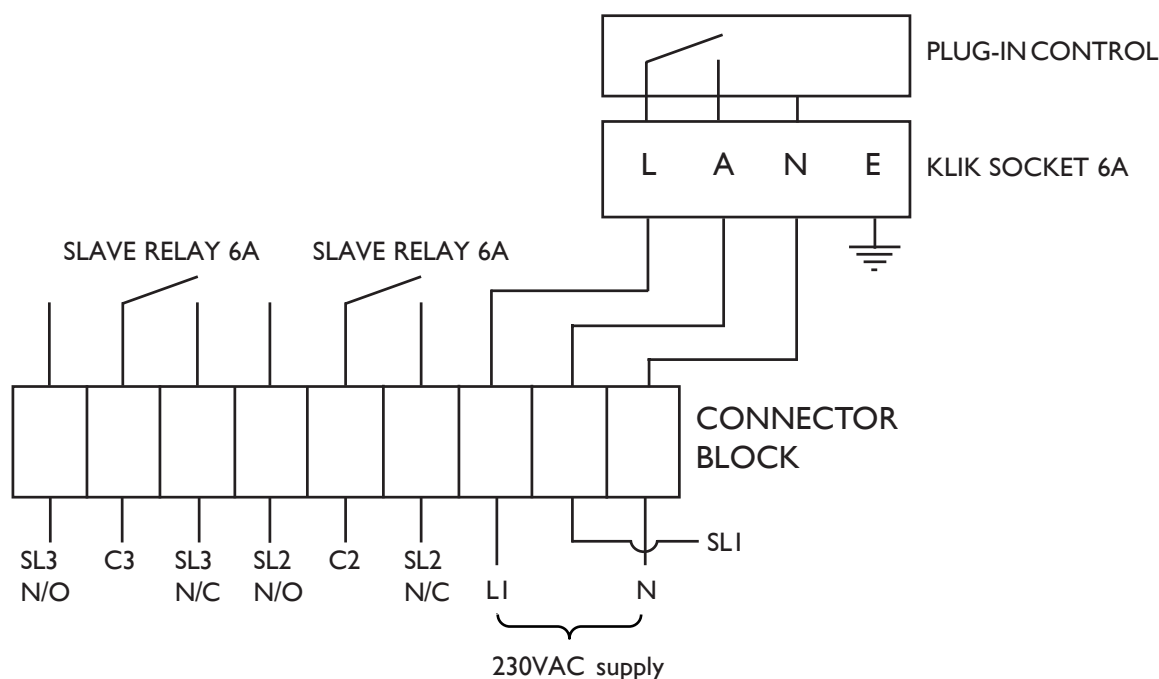

Versions with extra relays can be made to special order.

Advice from:

Danlers Limited,
Vinciens Road,
Bumpers Farm Ind. Est.,
CHIPPENHAM,
Wiltshire,
SN14 6NQ,
United Kingdom.

Telephone +44 (0)1249 443377
Facsimile +44 (0)1249 443388
E-mail sales@danlers.co.uk
Web www.danlers.co.uk

Company Registered Number 2570169
VAT Registration Number 543 5491 38

